



### APPROACHING INSTRUCTIONS

DURING APPROACHING VSL MUST FOLLOW PIRAEUS TRAFFIC SEPARATION ZONE. BEFORE ENTER TRAFFIC ZONE YOU MUST CONTACT PIRAEUS TRAFFIC STATION ON VHF CH 13.

AT THE EXIT OF TRAFFIC ZONE YOU MUST CONTACT AGAIN PIRAEUS TRAFFIC STATION ON VHF CH 13 AND REPORT YOUR EXIT.

ALWAYS STAND BY VHF CH 13 AND 16 AND FOLLOW INSTRUCTIONS GIVEN FROM PIRAEUS TRAFFIC STATION.

ALL MOVES OF THE VESSEL MUST BE REPORTED FROM THE MASTER TO THE PIRAEUS TRAFFIC STATION VHF CH 13.

### ANCHORAGE INSTRUCTIONS :

AFTER YR EXIT FROM TRAFFIC SYSTEM YOU CAN PROCED TO THE ANCHORAGE AND FIND A SAFE POSITION. THE MINIMUM SAFE DISTANCE FROM ALL VESSELS AROUND YOU WILL BE GIVEN FROM PIRAEUS TRAFFIC CONTROL.

WHEN YOU WILL FIND YR POSITION YOU MUST ASK PERMITTION FROM PIRAEUS TRAFFIC CONTROL TO DROP THE ANCHOR.DO NOT DROP ANCHOR BEFORE YOU RECEIVE PERMITTION FROM PIRAEUS TRAFFIC CONTROL

ANCHORAGE LIMITS 010 DEGREES UP TO 050 DEGREES BEARING FROM ATALANTI ROCK ISLAND.

ATALANTI ROCK ISLAND POSITION :

LATITUDE 37 56 00

LONGTITUDE 23 34 02.

IS A SMALL ROCK ISLAND WEST OF PSITALIA LIGHT HOUSE.

DURING YR STAY YOU MUST ALWAYS STAND BY ( AROUND THE CLOCK ) V.H.F. CHANNEL 13 AND 16 AND ALL INSTRUCTIONS GIVEN FROM ( V.T.S. ) PIRAEUS TRAFFIC CONTROL STATION MUST BE FOLLOWED.

IF FOR ANY REASON YOU WANT TO CHANGE POSITION YOU CAN ASK PERMISSION FROM PIRAEUS TRAFFIC CONTROL STATION BEFORE YOU MAKE ANY MOVE. THE NEW POSITION MUST BE INSIDE THE ANCHORAGE LIMITS GIVEN ABOVE.

ON DEPARTURE YOU MUST ASK PERMISSION FROM PIRAEUS TRAFFIC TO HEAVE UP THE ANCHOR. WHEN ANCHOR IS UP YOU MUST ASK FOR NEW PERMISSION TO START SAILING.

ALWAYS AT YR DISPOSAL IF YOU NEED MORE INFO.

BRGDS / BEST Shipping Agency

OUR CONTACT DTLS :

TEL : +30 2105561995 / 2105549302

FAX : +30 2105561996

TLX : 214022 BEST GR

MOB : +30 / 6973998111 / 6937041111

EMAIL : [bestship@otenet.gr](mailto:bestship@otenet.gr)

PICS : PANAYIOTIS STRATIS - MANOLIS BIKAKIS